

Getting Started

This document describes the procedure for installing CBKZ-3610 series (ANAMORPHIC LICENSE, FULL-FRAME LICENSE) in the MPC-3610. Save the installation file (text file with generated install key) obtained from Upgrade and License Management Suite on an SD card, and install the file using the camera menu.

For details on using menus, refer to the Operating Instructions of the MPC-3610.

Installation file

The installation file is obtained using Upgrade and License Management Suite.

Upgrade and License Management Suite URL:
<https://ulms.sony.net/portal/#/>

The installation file is provided as a text file (.txt file name extension) with the following name.

<Model_number>INSTALLKEY_<17-digit number (YYYYMMDDHHMMSSFFF)>.txt

Example:

CBKZ-3610AINSTALLKEY_20180208123456789.txt

The model number corresponds to the following licenses.

License name	Model number
ANAMORPHIC LICENSE	CBKZ-3610A
ANAMORPHIC LICENSE 30DAYS	CBKZ-3610AM
ANAMORPHIC LICENSE 7DAYS	CBKZ-3610AW
FULL-FRAME LICENSE	CBKZ-3610F
FULL-FRAME LICENSE 30DAYS	CBKZ-3610FM
FULL-FRAME LICENSE 7DAYS	CBKZ-3610FW

Notes on Installing

- Use an SDHC memory card (Speed Class: 4 to 10, non-UHS compatible, Capacity: 2 GB to 32 GB) or SD memory card (File system: FAT 16, Capacity: up to 2 GB).
- Use an SD card that is formatted using the format function of the MPC-3610.

For details about the format function, refer to the Operating Instructions of the MPC-3610.

Saving the Installation File to an SD Card

- 1 Prepare the computer to save data to the SD card.
- 2 Save the obtained installation file to the root directory of an SD card.

When installing time-limited licenses, you can install up to two licenses for the same function.

Performing the installation

Note

Do not do any of the following while performing the installation.

Doing so could interrupt the installing process, and cause malfunctions.

- Eject or insert an SD card
- Turn the power off

For details on using the MPC-3610, refer to the Operating Instructions of the MPC-3610.

- 1 Insert the SD card on which the installation file was saved into the SD card slot of the MPC-3610.
- 2 Open the Maintenance > License Options page in the full menu.

The name of the license to install is displayed after “Install:” on the first line.

License name	License Options display
ANAMORPHIC LICENSE	Install: Anamorphic Permanent
ANAMORPHIC LICENSE 30DAYS	Install: Anamorphic 30days
ANAMORPHIC LICENSE 7DAYS	Install: Anamorphic 7days
FULL-FRAME LICENSE	Install: Full Frame Permanent
FULL-FRAME LICENSE 30DAYS	Install: Full Frame 30days
FULL-FRAME LICENSE 7DAYS	Install: Full Frame 7days

If the install key is not detected

Nothing is displayed after the “Install:” character string. This may be caused by the following:

- The installation file was not saved in the root directory of the SD card.
- An installation file containing the install key for a different device was saved on the SD card.
- The saved install key was obtained using an invalid Unique Device ID.
- An attempt was made to install a time-limited license key for a function for which two time-limited install keys have already been installed.
- The name of the installation file saved on the SD card is invalid.

Save the correct installation file on the SD card, and reinstall from step 1.

- 3 Press the SEL/SET dial, and select “Execute.”

- 4 An “Install License?” message appears. Turn the SEL/SET dial and select “Execute.”

Installation starts. When installation is completed, an “Install License OK: Turn Power Off” message appears. Set the power switch of the MPC-3610 to the OFF position.

Note

When turning the MPC-3610 off, be sure to use the power switch of the MPC-3610. If the DC power or battery is removed while the power switch is ON, the installation is not performed correctly.

- 5 Restart the MPC-3610.
- 6 Open the Maintenance > License Options page in the full menu, and check that the installed function has been activated.

License name	License Options display
ANAMORPHIC LICENSE	Anamorphic – Permanent License Installed
ANAMORPHIC LICENSE 30DAYS	Anamorphic – 30days Remaining
ANAMORPHIC LICENSE 7DAYS	Anamorphic – 7days Remaining
FULL-FRAME LICENSE	Full Frame – Permanent License Installed
FULL-FRAME LICENSE 30DAYS	Full Frame – 30days Remaining
FULL-FRAME LICENSE 7DAYS	Full Frame – 7days Remaining

For time-limited licenses, the number of installed licenses is indicated by “(1 key)” or “(2 keys).”

If “Not Installed” or “Expired” is displayed for the installed function

Recheck each step of the installation procedure, and reinstall from step 1.

Note

If a time-limited license is installed, a warning icon is displayed in the status display area of the Home screen on the sub display two days before the license expires. A message indicating the time before expiration can be displayed on the Info > Camera Condition page in the menu. To continue using the function, install a new license.

After the time-limited license expires, the function is still available for use until the camera power is turned off. Note that when the power is turned on again, the time-limited function is no longer available.